PMV 5360 - DOUBLE SELECTION (WITH SENSOR)

USERS MANUAL

Front Side of the Control Key Board

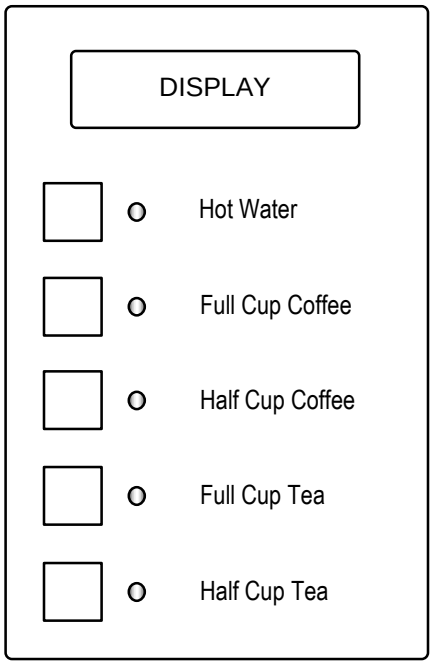

Back Side of the Control Key Board

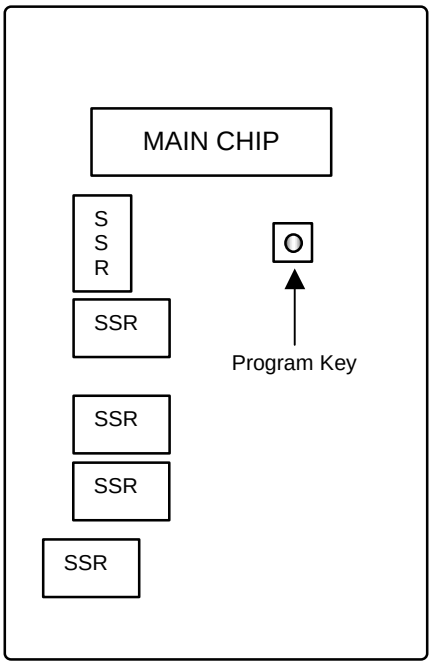

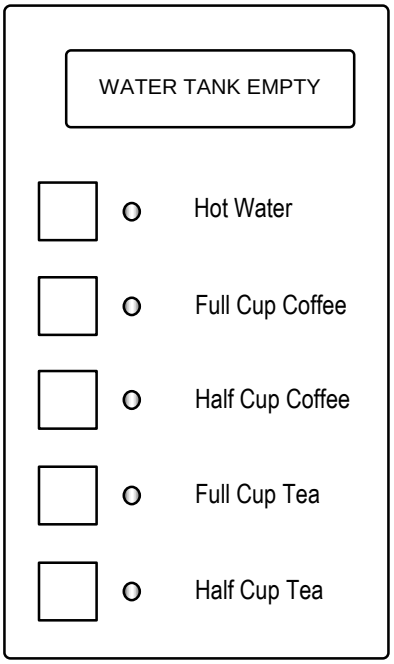

- Fill the water in main tank.
- Red LED glows, it is unable to dispense.

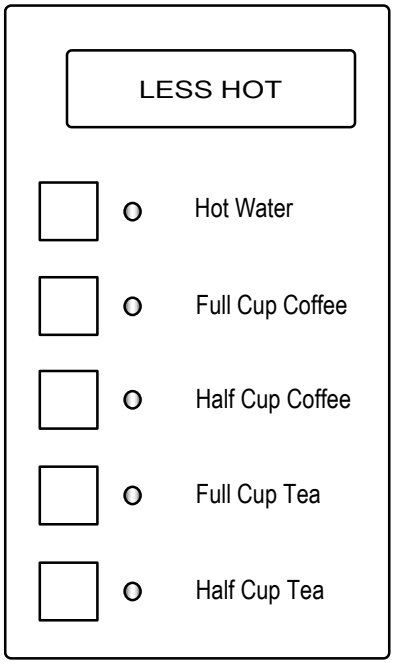

- Wait few minute to take drink.
- Yellow LED glows, it is unable to dispense immediately.

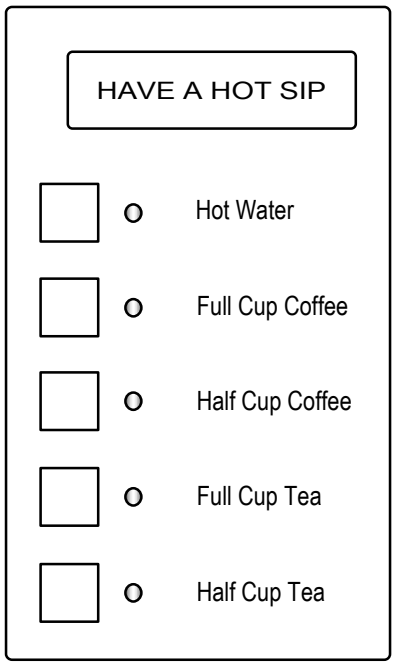

- Ready mode.
- Green LED glows, it is ready to dispense.

OPERATIONS

To dispense Coffee:

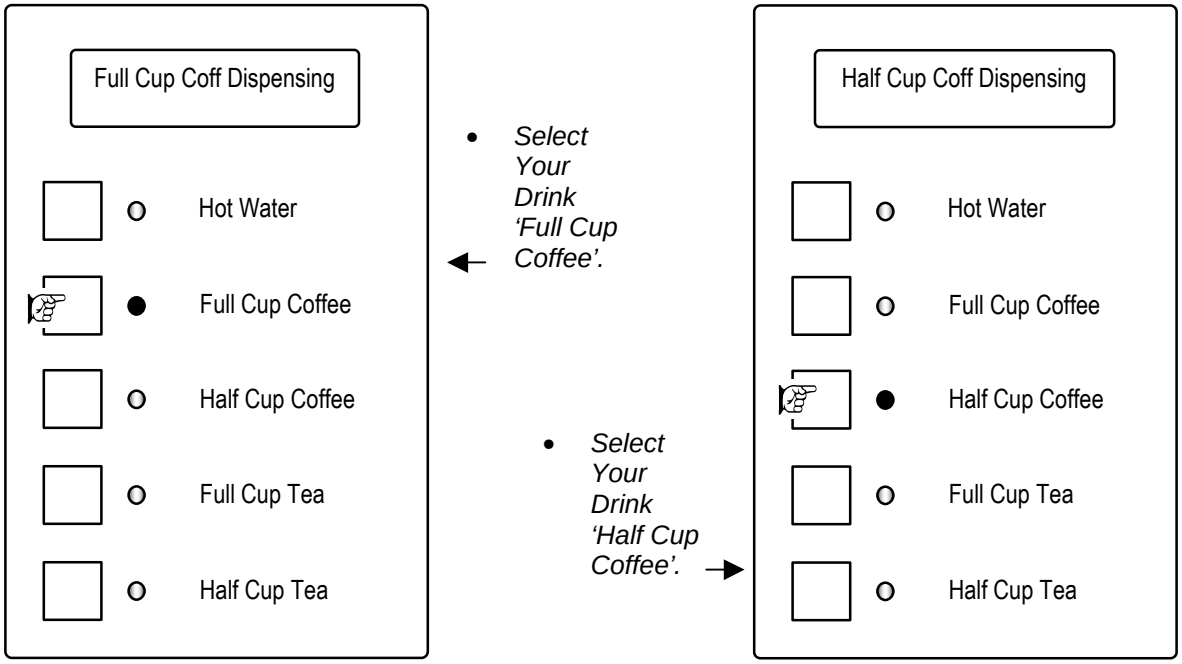

➢ ***Similar to dispense Tea.***

Dispensing Of hot water in Coffee side:

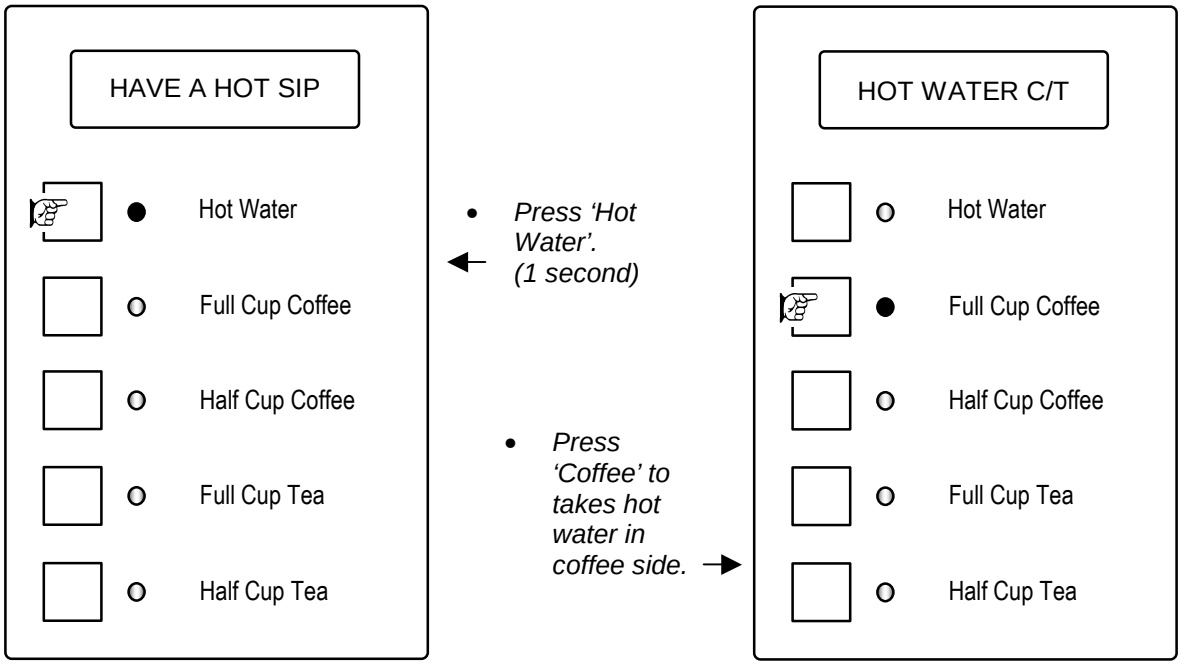

➢ ***Similar to dispensing of hot water in Tea side.***

To display the ‘Counts’ and ‘Temperature’:

- **Hot Water Button:** Press one second, it is displays ‘C/T FLUSHING’.

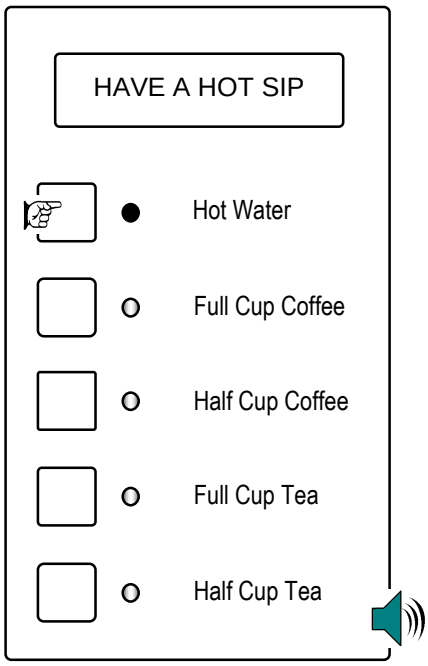

- Press ‘Hot water’. *(Beep)*

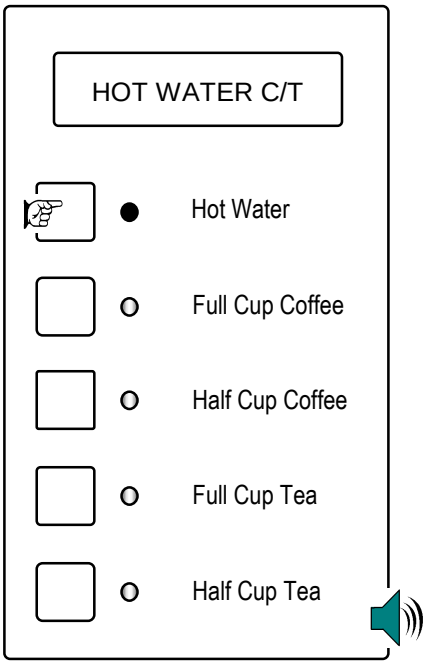

- Again press ‘Hot water’. *(Beep)*

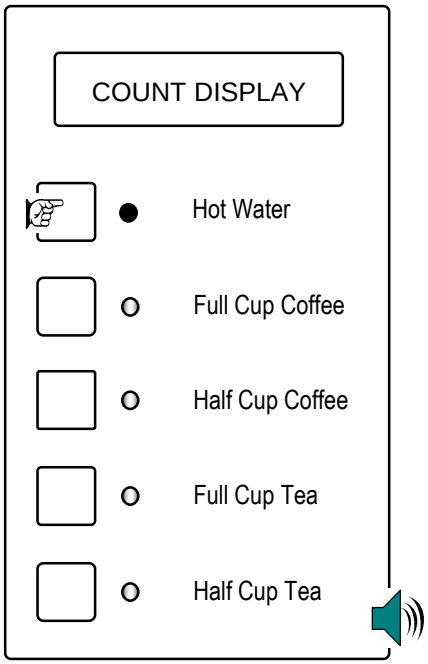

- Again press ‘Hot water’. *(Beep)*

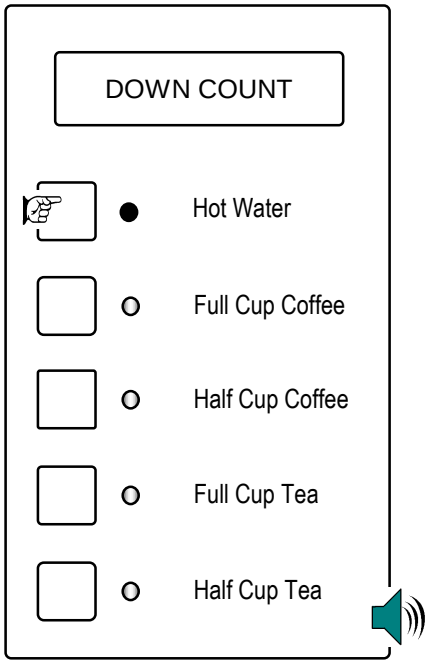

- Again press ‘Hot water’. *(Beep)*

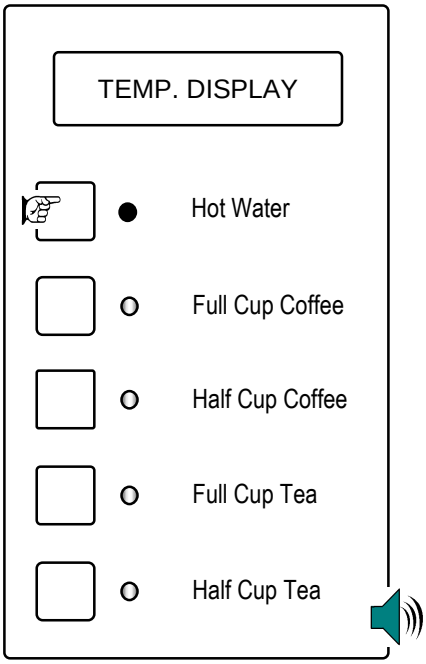

- Again press ‘Hot water’. *(Beep)*

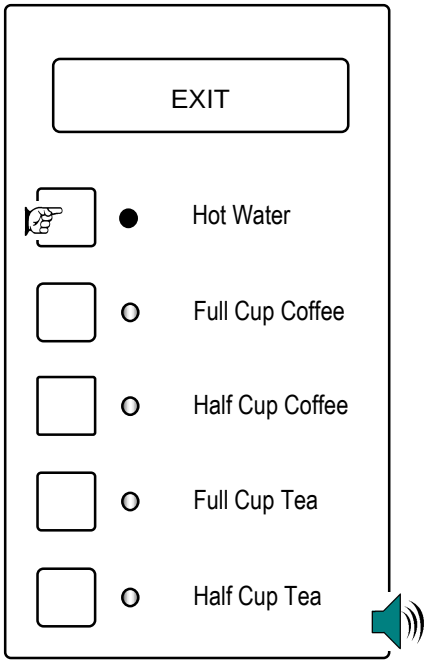

- Exit the menu.

To display Coffee / Tea counts:

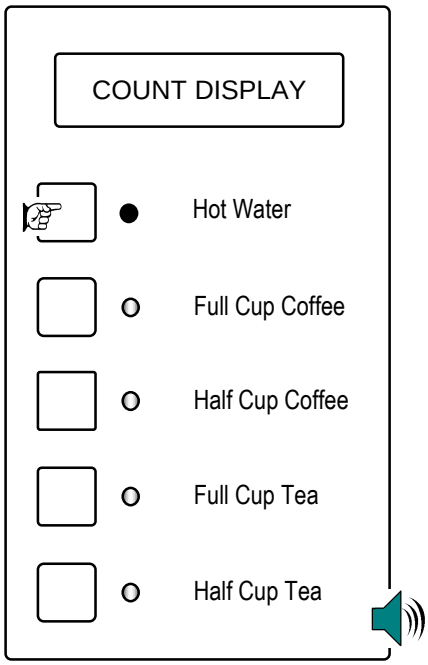

- Press ‘Hot water’ button two times for counting.

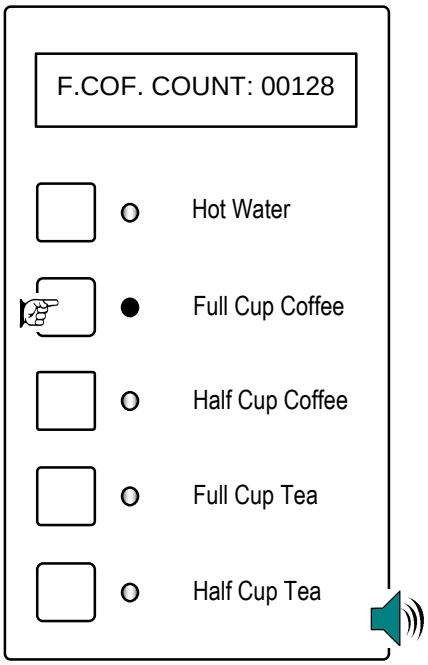

- Then press ‘Full cup coffee’.

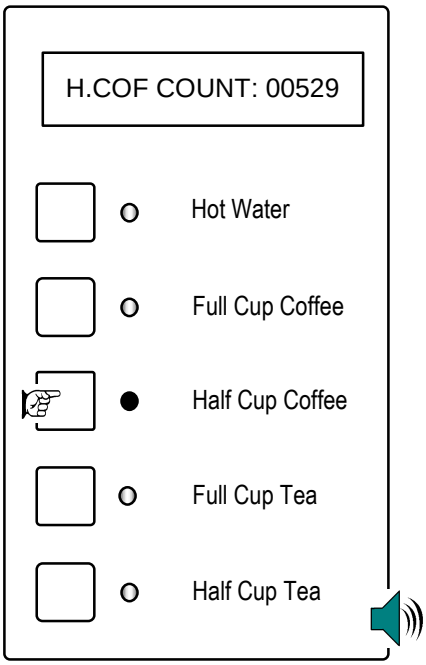

- Then press ‘Half cup coffee’.

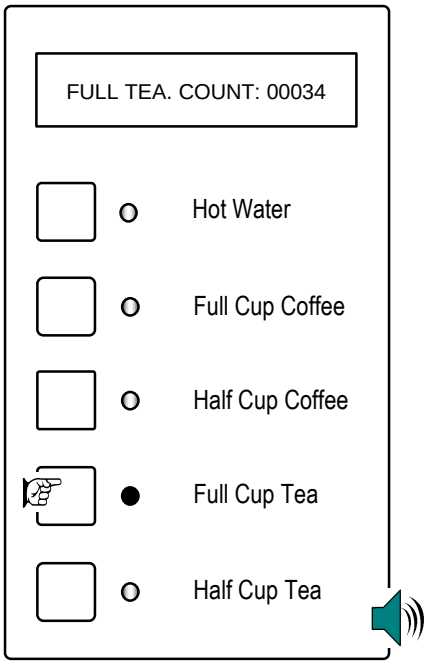

- Then press ‘Full cup tea’.

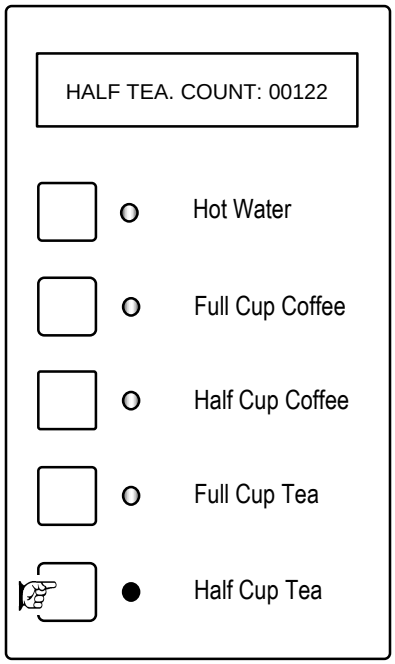

- Then press ‘Half cup tea’.

➢ ***When you finished your counts, the display automatically returns to the normal mode in 25 seconds.***

To display the temperature:

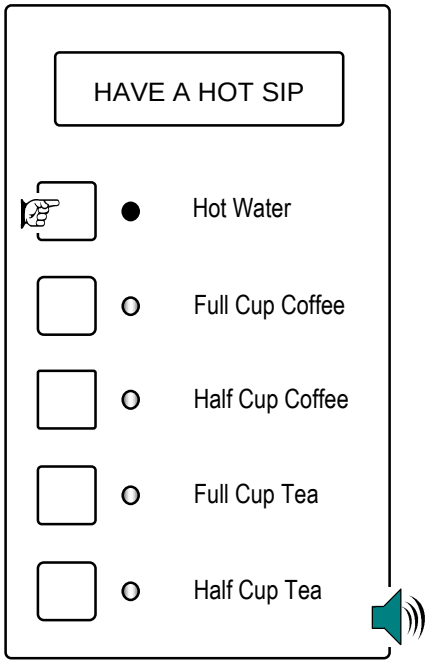

- Press 'Hot water' button three times. *(Beep)*

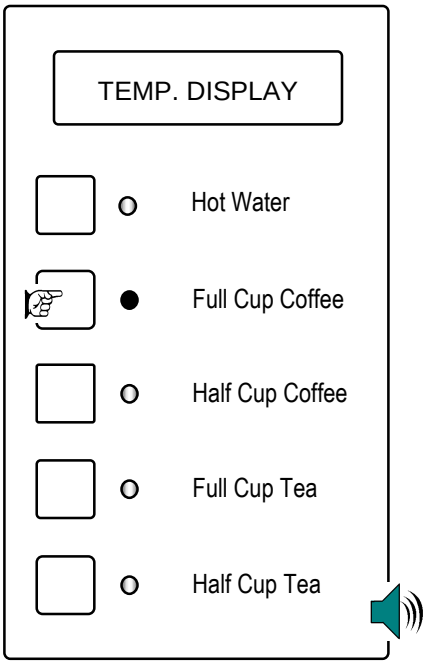

- Again press 'Full cup coffee'. *(Beep)*

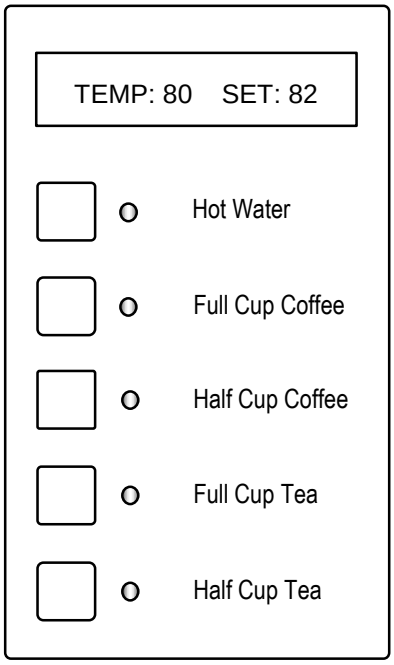

- It shows the current temperature.

To manually fill the boiler:

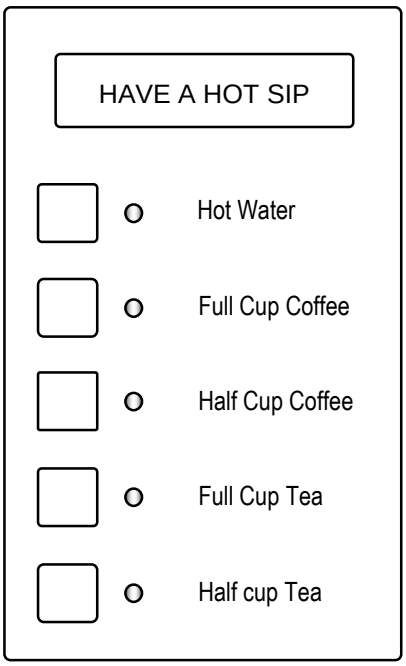

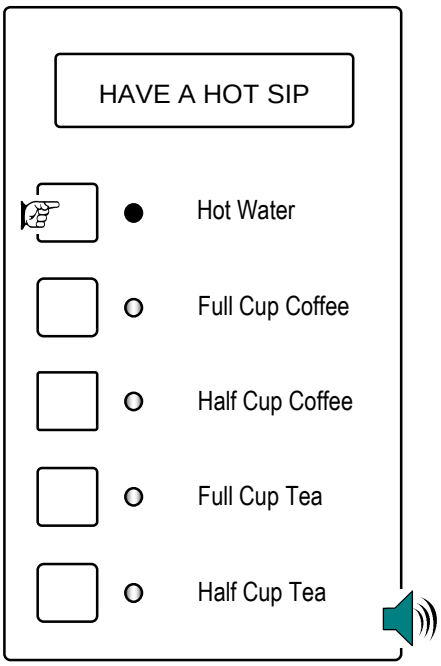

- Continually press 'Hot water ' button till boiler is filled.

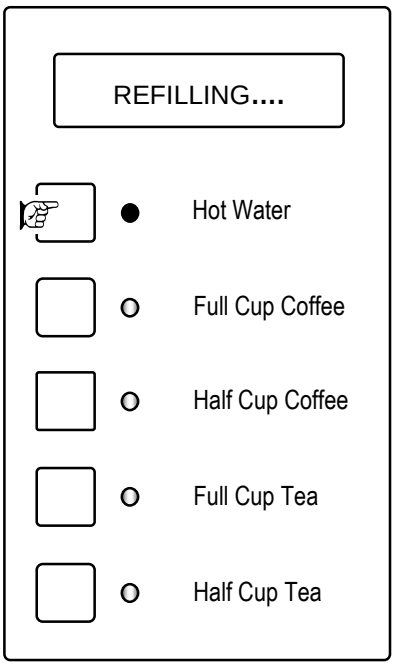

- When you release the button, the manual refilling is stopped.

Programming the Control Card:

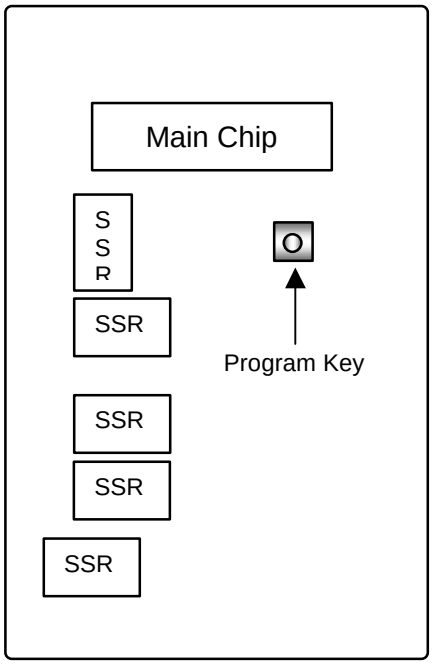

- Press the 'Program Key' one time.

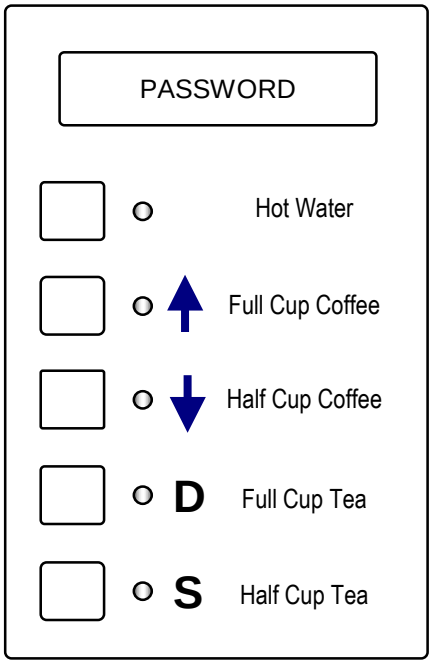

- These four keys function differently in this mode.

To enter the PASSWORD:

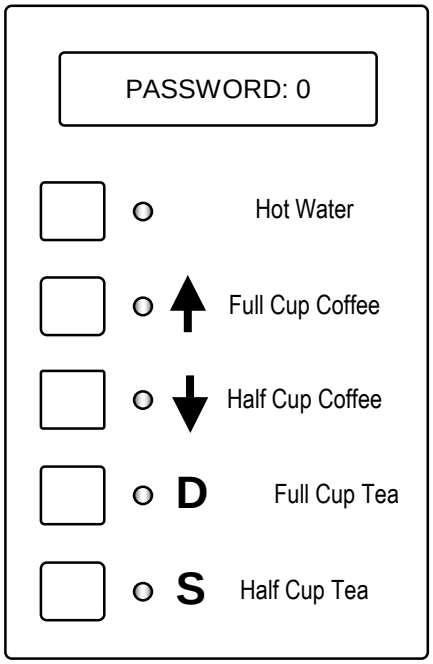

- Use Up / Down Keys to bring your password on the screen.
- Then press 'store' key to enter the 'settings mode'.

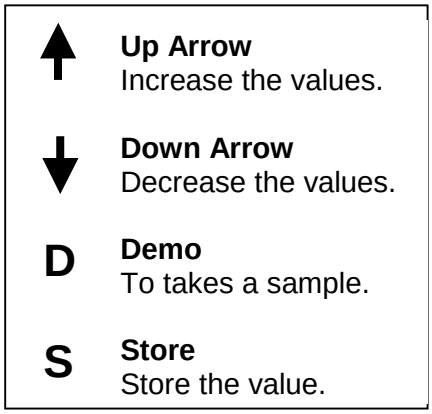

- Factory set of Password value = 0

How to set all Programs?

First Go to the ‘Settings Mode’

a) Full cup coffee water

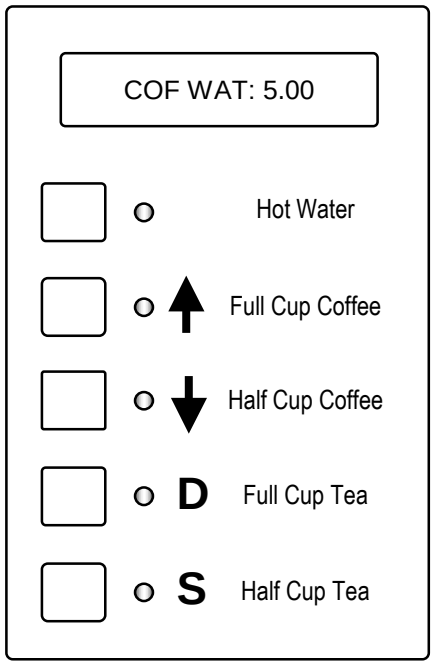

- **Water Set for full cup coffee:**

  It shows ‘Water set’ on display, then set the value by using Up / Down arrow keys. And press ‘store’ key to accept.

b) Full cup coffee powder

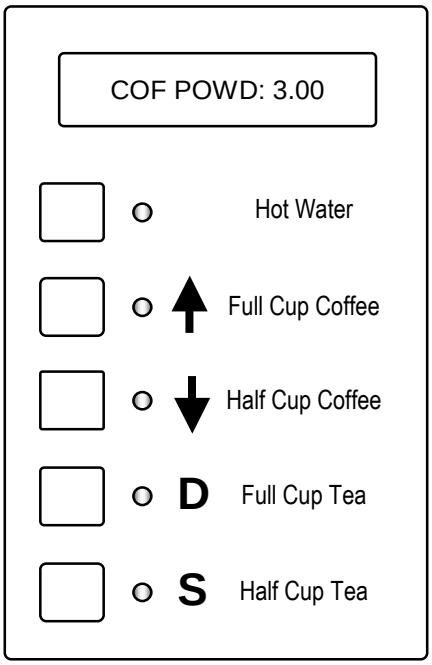

- **Powder Set for full cup coffee:**

  It shows ‘Powder set’ on display, then set the value by using Up / Down arrow keys. And press ‘store’ key to accept.

c) Half cup coffee water

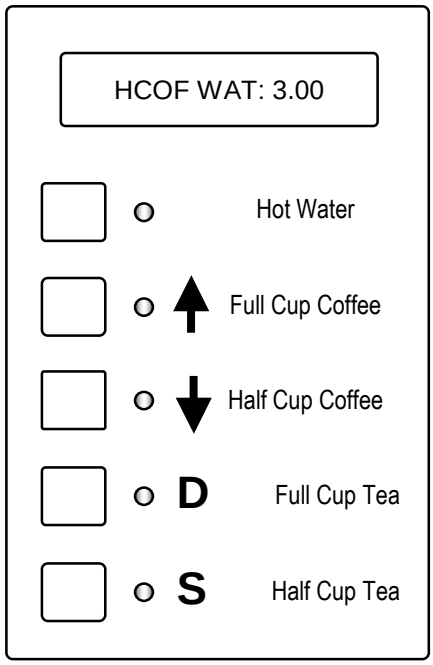

- **Water Set for Half cup coffee:**

  It shows ‘Water set’ on display, then set the value by using Up / Down arrow keys. And press ‘store’ key to accept.

d) Half cup coffee powder

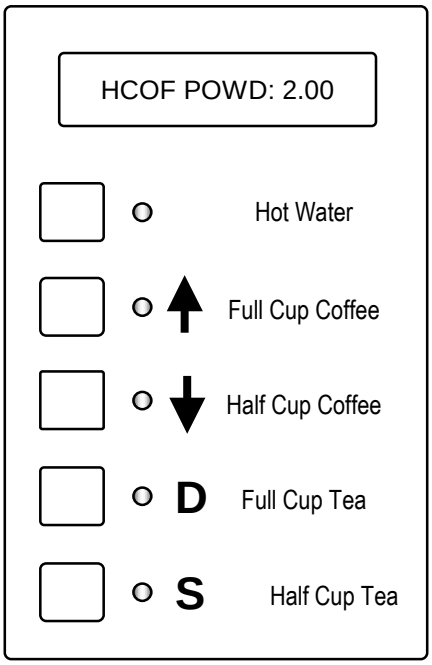

- **Powder Set for Half cup coffee:**

  It shows ‘Powder set’ on display, then set the value by using Up / Down arrow keys. And press ‘store’ key to accept.

➢ ***Similarly for tea Water / Powder setting.***

e) Temperature set

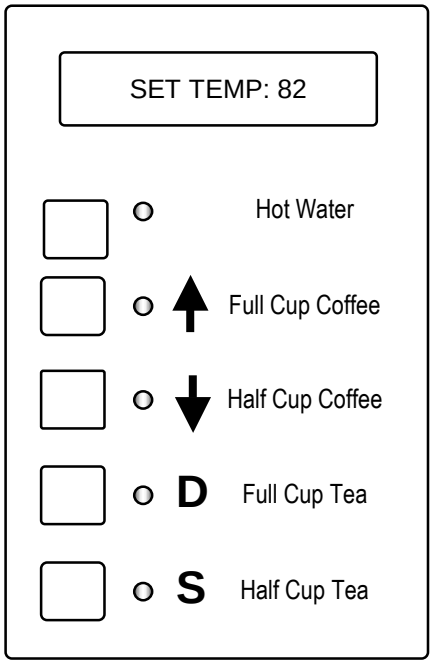

- **Temp. Set**

It shows 'Set Temp' on display, then set the value by using Up / Down arrow keys. And press 'store' key to accept.
Min: 72
Max: 95

Factory Settings = 82

f) Coin mechanism set

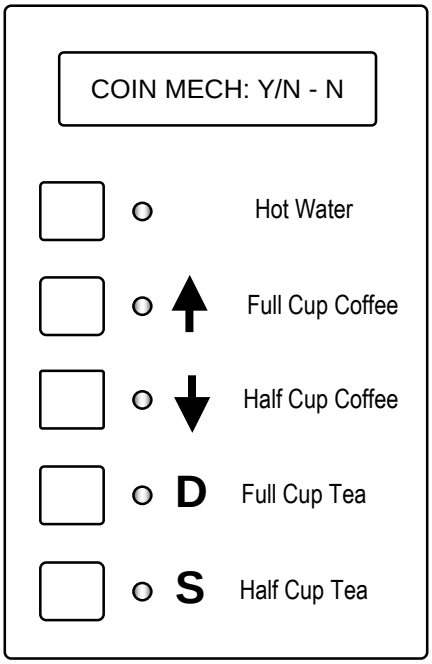

- **Coin mech.**

It shows 'Coin mech:Y/N-N' on display, then set the value by using 'Demo' key. And press 'store' key to accept.

Factory Settings = NO

g) Initial boiler fill set

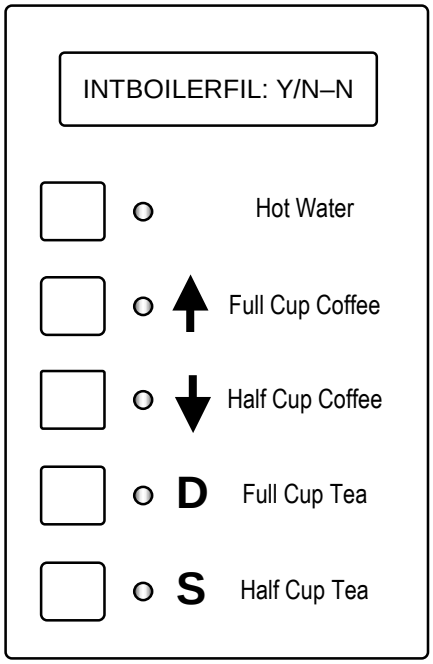

- **Initial boiler fill**

It shows 'Intboilerfil: Y/N–N' on display, then set the value by using 'Demo' key. And press 'store' key to accept.

Factory settings = NO

h) Auto clean set

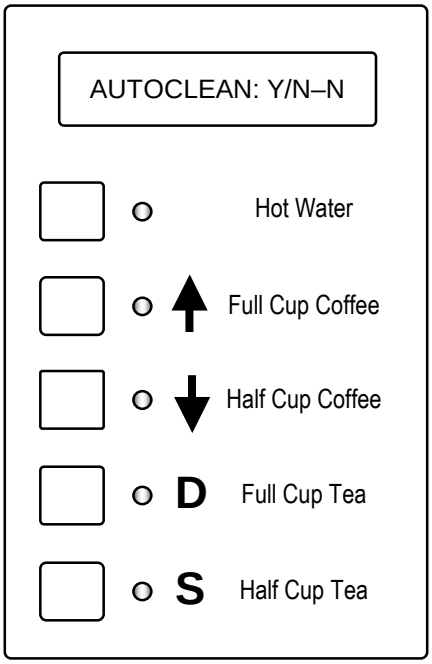

- **Auto Clean**

It shows 'Autoclean: Y/N–N' on display, then set the value by using 'Demo' key. And press 'store' key to accept.

Factory settings = NO

i) Half cup enable set

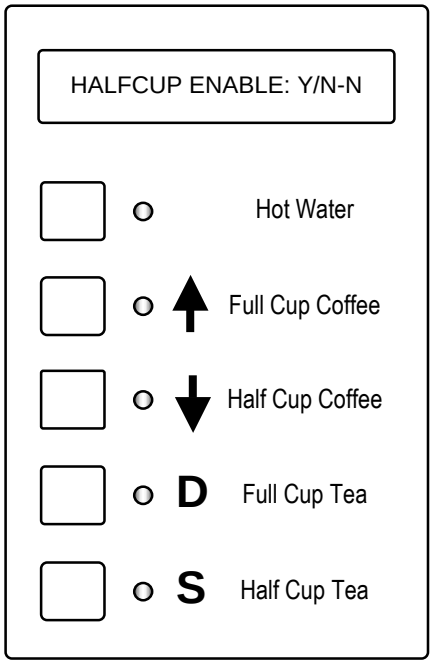

- **Half Cup Enable**

  It shows 'Half cup enableY/N-N' on display, then set the value by using 'Demo' key. And press 'store' key to accept.

Factory settings = YES

j) Powder brake set

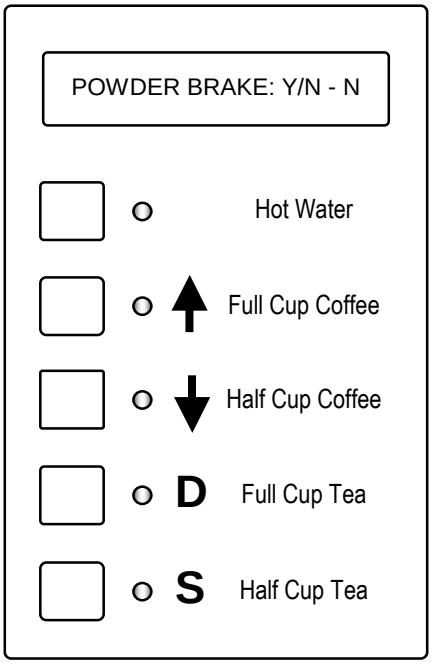

- **Powder brake**

  It shows 'Powder Brake:Y/N-N' on display, then set the value by using 'Demo' key. And press 'store' key to accept.

Factory settings = YES

k) Count reset

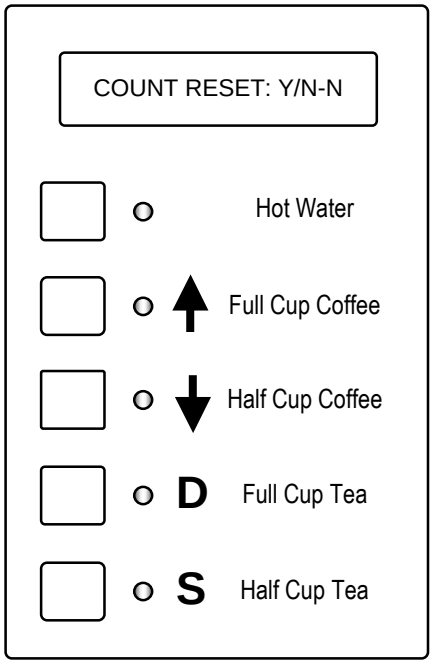

- **Count reset for all Dispensing count:**

  It shows 'countreset: Y/N-N' on display, then set the value by using 'Demo' key. And press 'store' key to accept.

Factory settings = NO

l) Down count set

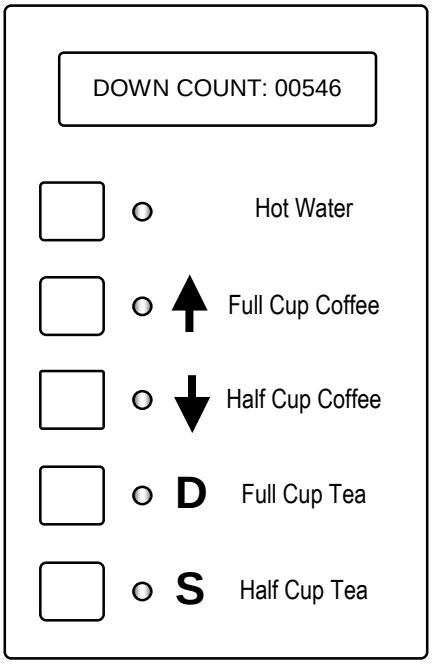

- **Down count set for all dispensing**

  It shows 'Down count: 0' on display, then set the value by using Up / Down arrow keys.
  And press 'store' key to accept.
  Min: 0
  Max: 50000

Factory settings = 0

m) Change Password

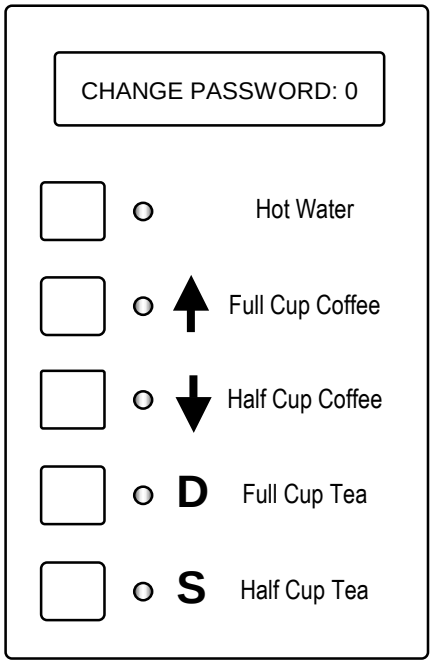

- **Password Set:**

  It shows 'Change password-0' on display, then set the value by using Up / Down arrow keys.
  And press 'store' key to accept.

  Min: 0
  Max: 9999

Factory settings = 0